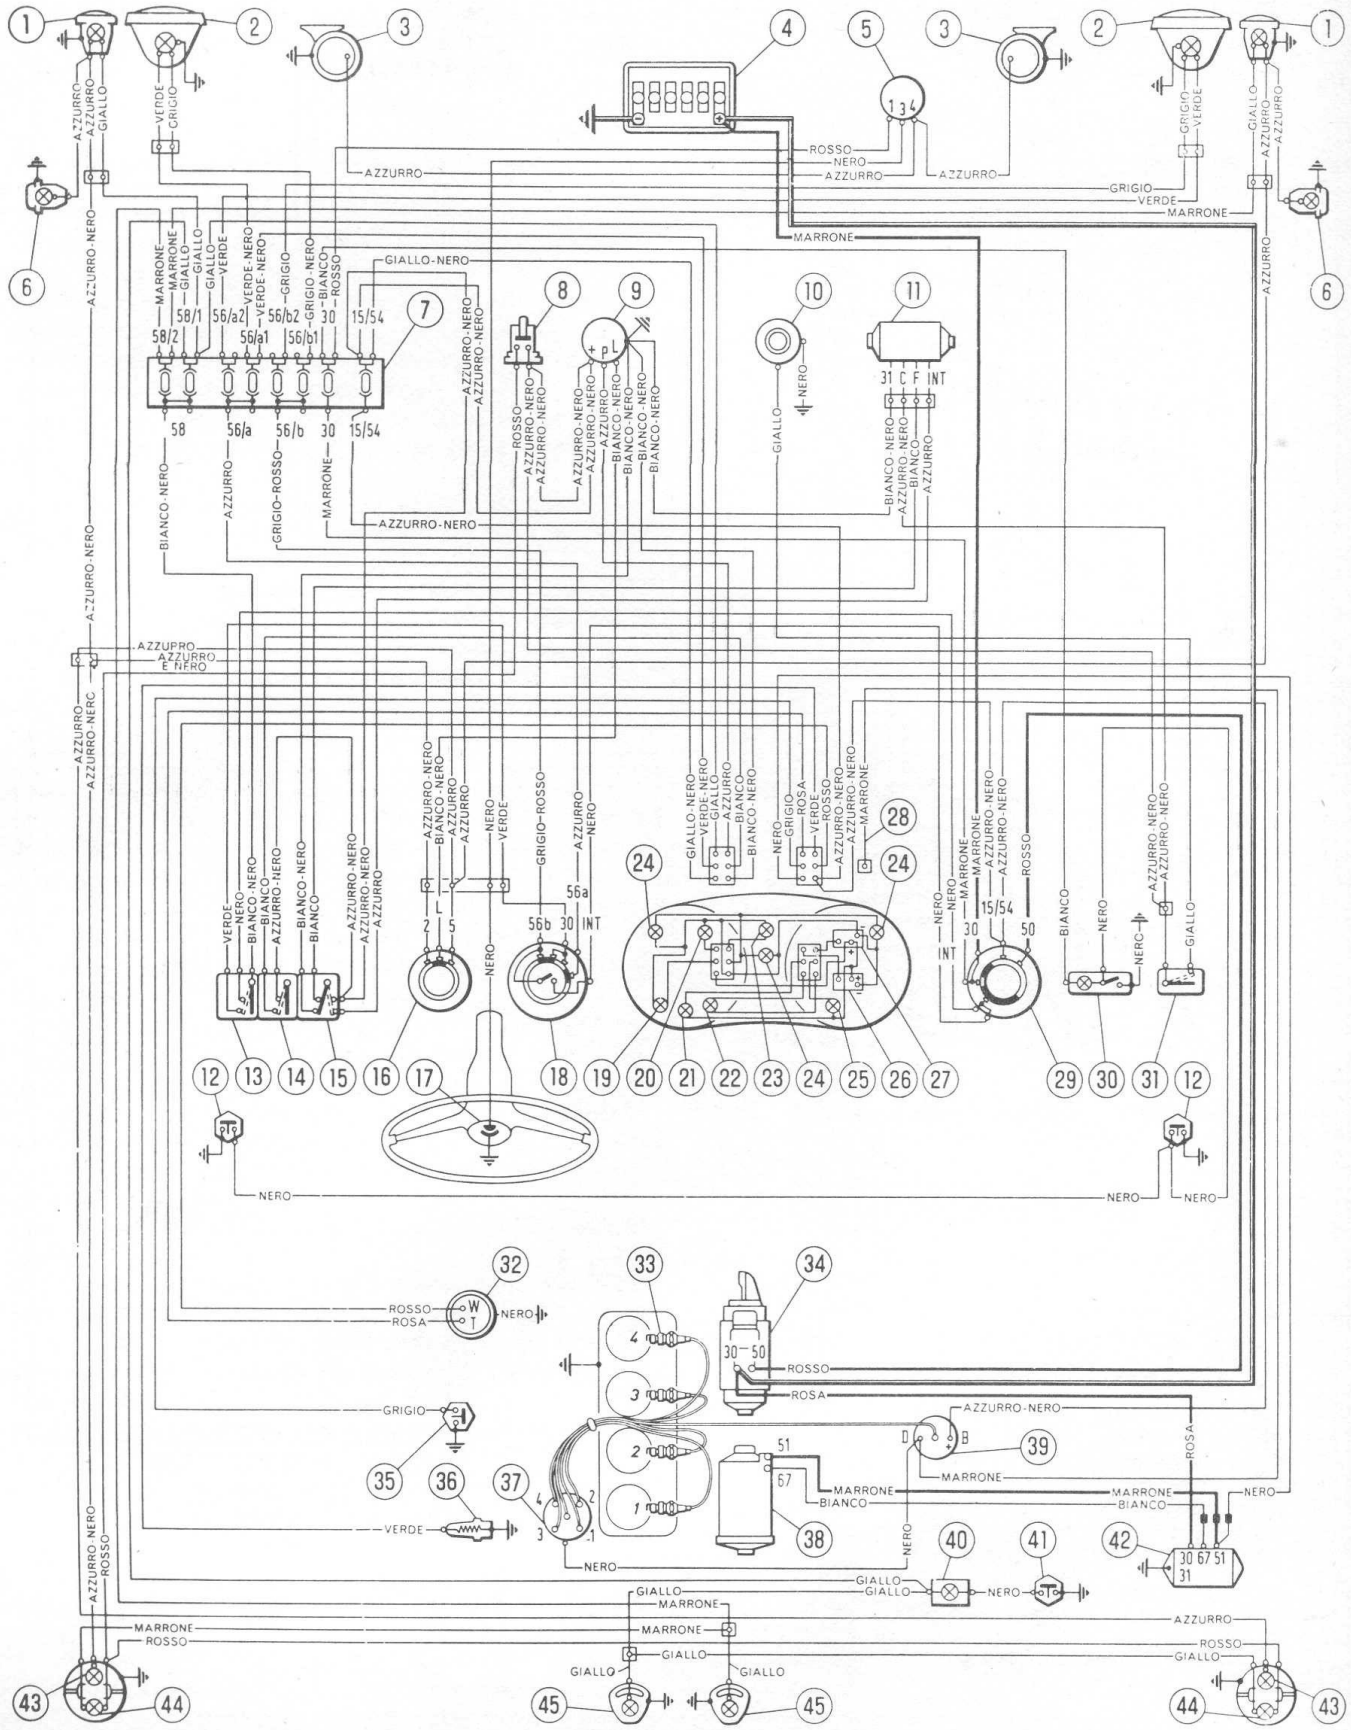

Wiring diagram - 850 Coupe

Key to Wiring Diagram – 850 Coupe

1 Front parking and direction signal lights
2 High and low beam headlights
3 Horn
4 Battery
5 Horn relay switch
6 Side direction signal lights
7 Fuses
8 Stop light jam switch
9 Direction signal flasher unit
10 Electrofan motor
11 Wiper motor
12 Courtesy light jam switch
13 Outer lighting master switch
14 Instrument cluster light switch
15 Windshield wiper switch
16 Direction signal light switch
17 Horn button
18 Selector switch for outer lighting and light flashes
19 High beam indicator (blue light)
20 Parking light indicator (green light)
21 Low oil pressure indicator (red light)
22 No-charge indicator (red light)
23 Direction signal indicator (green light)
24 Instrument cluster lights
25 Reserve supply indicator (red light)
26 Fuel gauge
27 Temperature gauge
28 Circuit wire for tachometer (extra)
29 Key-type ignition switch, also energizing warning lights and starting circuits
30 Map light, with toggle switch incorporated
31 Electrofan motor switch
32 Fuel gauge tank unit
33 Spark plugs
34 Starting motor, with solenoid switch
35 Low oil pressure indicator sending unit
36 Temperature gauge sending unit
37 Ignition distributor
38 Dynamo
39 Ignition coil
40 Engine compartment light
41 Engine compartment light jam switch
42 Generator regulator
43 Rear direction signal lights
44 Rear parking and stop lights
45 License plate lights

All fuses are 8 - ampere fuses, except No.30 which is a 16-ampere fuse.

NOTE The mark – means that the cable is fitted with numbered strip or ferrule.

CABLE COLOUR CODE

Azzurro	=	**Blue**	Verde	=	**Green**
Bianco	=	**White**	Azzurro-nero	=	**Black and blue**
Giallo	=	**Yellow**	Bianco-nero	=	**Black and white**
Grigio	=	**Grey**	Giallo-nero	=	**Black and yellow**
Marrone	=	**Brown**	Grigio-nero	=	**Black and grey**
Nero	=	**Black**	Grigio-rosso	=	**Red and grey**
Rosa	=	**Pink**	Verde-nero	=	**Black and green**
Rosso	=	**Red**	INT	=	**Switch**

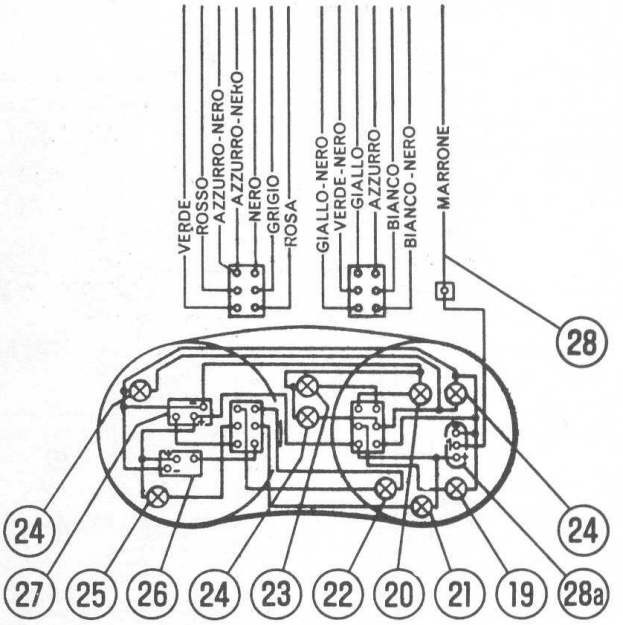

850 Coupe – Wiring diagram modification for cars equipped with tachometer

19 High beam indicator (blue light)
20 Parking light indicator (green light)
21 Low oil pressure indicator (red light)
22 No-charge indicator (red light)
23 Direction signal indicator (green light)
24 Instrument cluster lights
25 Reserve supply indicator (red light)
26 Fuel gauge
27 Temperature gauge
28 Tachometer wire
28a Electronic tachometer